

How to schedule and record programs or series with your DVR.

nTelos Video can provide a receiver with DVR capability. Record up to 120 hours of programming with your DVR, schedule future programs to record, and watch your recorded shows anytime. Pause, rewind, and fast-forward recorded shows just as you would a DVD or videotape. Your receiver stores these programs and keeps a list you can see by pressing **RECORDED TV**. A DVR receiver from nTelos is required to provide DVR features. Additional charges may apply.


Controlling recorded and live TV.

- > Press **PAUSE** to freeze a live TV program for up to 90 minutes, then resume playing at the point where you paused.
- > Press **PLAY** to resume playing the program from the point where you paused.
- > Press **FF** to move forward quickly or **FWD** to fast-forward in 30-second increments.
- > Press **REW** to rewind quickly or **REPLAY** to skip backward in 7-second increments.
- > You can press **FF** or **REW** once, twice, or three times to go forward or back at increasing speeds.

A progress bar will appear onscreen to indicate how far you can rewind (or go forward) in a recorded program and at what point you will be watching live TV.

Recording a program you're watching.

- > Press **RECORD** when you are tuned to a program you want to save. Recording will begin immediately and stop at the program's scheduled end time.
- > The message "Recording" appears onscreen, and the **RECORD** light on the receiver lights up and stays on until the end of the recording.
- > Press **STOP** on your remote control while watching a program. A message appears that enables you to stop or continue recording.
- > Select **STOP** and press the **OK** button on your remote. The message "Recording stopped" appears. The program guide will no longer display a red dot in the grid cell for that program.

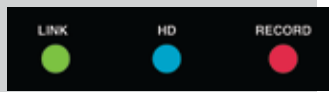

Recording a program you're watching with extreme time at the end.

If you think a program may run long (often the case with sporting events), tell the DVR to add time to the end of your recording.

- 1 Press **INFO**, select *Record program* on the *Program Info* screen, then press **OK** to bring up the *Record* screen.
- 2 Use **arrows** to select *Change* in the *Stop recording* section. Press **OK** to select the desired additional time.
- 3 After the time is set, select *Record* to begin recording, then press **OK**.



Scheduling a program or series to record from the guide.

- 1 Press **GUIDE**, then use **arrows** to scroll through and highlight a program.
- 2 Press **RECORD**. A red dot appears next to the program listing to indicate that a recording is scheduled.
- 3 Press **RECORD** twice to schedule a series of recordings at the same day and time every week. Two red dots will appear.
- 4 Press **RECORD** a third time to cancel recording. The dots will disappear.



Scheduling a program or series to record from the program info screen.

- 1 Press **GUIDE** and use the **arrows** to highlight the program you want to record and then press **INFO**.
- 2 Select *Record episode* or *Record series* and press **OK**. If *Record series* is selected, use **arrows** to select *Change* under *Time* and press **OK** to choose a scheduling option: any day, any day/anytime, any day/anytime/once per day.
- 3 To pad the recording time in case the program runs long, select *Change* next to *Stop recording*; press **OK** to select a time.
- 4 Select *Record*, then press **OK**.

nTelos Video does not adjust if a program's schedule changes unexpectedly. However, planned schedule changes (for example, a series moves from 8:30 p.m. to 8 p.m. for one week) will be followed and the episode will be recorded in its entirety.

What can you watch while recording?

You may watch the program being recorded, watch another live program or watch another program also being recorded.

Scheduling a single recording by entering channel, date and time.



- > Press **RECORDED TV** (or press **MENU**, then select *Recorded TV*).
- > Use the **right arrow** to select *Add recording* and press **OK**.
- > Then select *Channel and time* and press **OK** to see the *Manual record* screen.
- > Fill in the fields on the *Manual record* screen, using **arrows** to move between fields.
- > Use the **number/letter** buttons to enter the channel to record under *Channel*.
- > Select *Change* under *Date*, and press **OK** to choose from available recording dates.
- > Use the **number/letter** buttons to enter the *time* you want to start and stop recording, and select **AM** or **PM**.
- > Select *Record*, then press **OK** to schedule the recording.

Recording when the TV set is off.

Your scheduled program will still record even if your TV is off as long as the receiver is on or in standby. This applies to scheduled recordings, not recordings started by pressing **RECORD** while watching live TV.


Scheduled recordings will not take place if your home loses electricity.

When your recordings conflict.

When a program or series you're trying to record overlaps other scheduled recording time slots, a *Recording conflict* screen appears.

Resolving single program conflicts.

- > To record the new program, select the new program in the *Recording conflict* screen and press **OK**.
- > To keep what was previously scheduled to record, select the previously scheduled program and press **OK**.

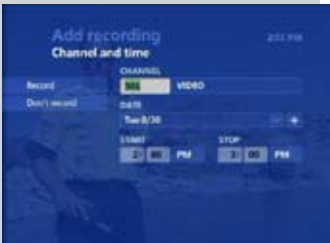

Resolving scheduled series conflicts.

- > Select *Record all episodes of new series* from the *Recording conflict* screen, then press **OK** when you want the recordings for a new series to override and cancel any previously scheduled recordings.
- > Select *Record only when no conflict occurs*, then press **OK** when you don't want to record episodes that conflict with previously scheduled recordings. All other recordings occur as planned.



Recording and overridden program.

- > In the *Guide* screen, select the overridden program (indicated by a crossed-out red dot) and press **OK**.
- > Next, in the *Program Info* screen, select *Resolve conflict* and press **OK**.
- < In the *Recording conflict* screen, select the previously overridden program or series episode and press **OK**. The overridden program now becomes the program to be recorded, canceling the other.



Clearing the conflict symbol.

- > In the *Guide*, select the overridden episode and a *Program Info* screen appears.
- > Select *Don't record* or *Cancel series*, then press **OK**.
- > You'll be asked to confirm this step, then press **OK**. The scheduled recordings will be cancelled and conflict symbols are cleared.

This does not erase episodes that have already been recorded.

Viewing what's scheduled to record.

- > Press **RECORDED TV** (or press **MENU**, then select *Scheduled*, and press **OK**).
- > The *Recorded TV* screen shows upcoming recordings, including series episodes, in the order in which they will be recorded.
- > To view only the scheduled series, use the **right arrow** to select series.
- > Use **arrows** or **CH/PG** to scroll the list.

Finished watching a recorded show?

You can press **STOP** at any time and choose to start over, resume watching where you left off, or erase the show. Learn more on p. 21

How to cancel scheduled recordings and watch recorded programs.

You can cancel a program or series recording any time before the recording begins.

Using the Guide to cancel recordings.

- > Press **GUIDE** then use **CH/PG** and the **arrows** to locate and select the program.
- > If the program is a series recording (two overlapping dots), press **RECORD** once. This cancels the entire series and the red dots disappear.
- > If the program is an individually scheduled recording (single red dot), press **RECORD** twice and the red dot will disappear.

If the scheduled series recording conflicts with previously scheduled recordings, a conflict screen will appear. Press **OK** until the conflict screen disappears, then press **RECORD** again.

Using the recorded TV screen to cancel recordings.

- > Press **RECORDED TV**. You may also press **MENU** and use the **right arrow** to select *Recorded TV*.
- > Press the **down arrow** to select *Scheduled*; press **OK**. You'll see a list of upcoming recordings in the order they'll be recorded.
- > To cancel a series, use the **right arrow** to select *Series* from the menu bar and see a list of your scheduled series.
- > Use **arrows** or the **CH/PG** button to scroll through the list.
- > Select the scheduled program or series you want to cancel, and then press **OK**. The *Program Info* or *Series Info* screen appears.
- > Select *Don't record* or *Cancel series*, then press **OK**. This will not erase previously recorded episodes.

Watch your recorded shows.

- > Press **RECORDED TV** or press **MENU** and use the **right arrow** to select **Recorded TV**, select *Browse recordings*, and press **OK**.



- > The *Recorded TV* screen lists your available recordings by date, from the most recently recorded to the oldest. To see a list of the recordings alphabetically by title, use the **right arrow** to select *By title*.
- > Select a recorded show and press **OK**. The *Program Info* screen appears.
 - Select *Play* to watch the program.
 - If you stopped watching the recorded program before it ended, choose *Resume play* to continue from where you left off.
- > When a recording is done playing, a *Finished* screen appears. Use the **arrows** to select *Done*, then press **OK**.



Stop playing a recorded program.

Press **STOP** at any time during a recording and the *Stopped* screen appears. Use **arrows** to select *Done* and press **OK**. This displays the *Recorded TV* screen, which lists your recordings. You can also:

- > Choose *Resume play* to continue watching the program where you left off.
- > Choose *Start over* to watch the program again from the beginning.
- > Choose *Erase* to stop watching the program and to delete it permanently.



Erasing your existing recordings.

Older programs are erased automatically to make room for new recordings when the storage limit is reached. Manually erasing unwanted recordings ensures that you keep what you want.

- > In the *Recorded TV* screen, select *Browse recordings* and press **OK**.
- > Highlight the program to erase, then press **OK**. Select *Erase*, then press **OK**. Repeat to confirm.

Protecting a recording from being deleted.

- > In the *Recorded TV* screen, select *Browse recordings* and press **OK**.
- > Highlight the recording you would like to protect, and press **OK**.
- > Highlight *Keep until*, then select *Space needed* or *Erase* and press **OK**.

What happens if I tune away from a recording?

All recordings play on a channel that you can tune to or away from. To resume playing, turn back to the channel or select it in *Recorded TV*.