

See your recordings, access Video On Demand, view your recordings, get program info, and more!

Your nTelos Video remote offers one-button access to shows you've recorded, the Video On Demand library, or program info like Summary and Cast & Crew. Press **MENU** to access all the features of your nTelos Video service, including searching, recording, parental controls, and more.

- > Press **RECORDED TV** to see a list of shows that you've recorded. You can view by date, title, or series; see what's scheduled to record; add new recordings; delete a scheduled recording; or start watching stored shows.
- > Press **VIDEO ON DEMAND** to access your Video On Demand library for on-demand shows, videos and more.
- > Press **MENU** to view helpful on-screen menus you can navigate easily with your remote's **arrow** buttons to access all the features of your video service.
- > Press **EXIT** to exit a menu screen and return to full-screen video.
- > Press **INFO** to get information about the program you're watching, a program you've selected in the *Guide*, or a program you've selected in your *Recorded TV* or currently rented Video On Demand list.

How to recognize buttons and screens in this Quick-Start Guide: All remote buttons are in **BOLD** and all screen names and menu items are in *italic*.

Want to see only your favorite channels on the Guide?

It's easy to create a favorites guide containing only the channels you like to watch. Learn more on p. 14.



Main Menu Quick Tips

Press **MENU** to reach this screen for access to all the features on your TV, including Video On Demand, parental controls, programs, interactive program guide, search, and more.

- > Use **left/right arrows** to select any heading in the *Main Menu* screen.
- > Use **up/down arrows** to select items that appear under a heading.
- > Use **OK** to activate your selected item.



Program Info Quick Tips

Press the **INFO** button to learn about a current program, or press **GUIDE**, highlight a program in the *Guide*, and then press **INFO**.

- > Use the **arrow** and **OK** buttons to view *Summary*, *Cast & crew*, or select recording options.
- > Use the **BACK** button to return to the last screen that you were viewing.
- > Use **EXIT** to dismiss the screen and go back to your full-screen TV program.



Guide Quick Tips

Use **arrows** or **CH/PG** to scroll through programs; press **OK** to select.

- > To go to a specific channel in the *Guide*, enter the channel number with the **number** buttons.
- > To record a highlighted program, press **RECORD** once to record an episode or twice to record the series. A red dot (two for a series) will appear next to the title.